

## 072453 Yamaha Tracer 9 Hugger Fitting Instructions

### Kit Includes:

1X	C072453	Moulding
1X	CFK072453	Bracket - left-hand side
1X	CFK072453B	Bracket - right-hand side
1X	CBOL0123	M6 x 12mm Bolt
4X	CWAS0221	M6 Washer
1X	CNUT0200	M6 Nyloc Nut
1X	CBOL0106	M5 x 12mm Bolt
1X	CWAS0100	M5 Washer
1X	CNUT0150	M5 Nyloc Nut
1X	CBOL0022	M4 x 16mm Bolt
1X	CNUT0120	M4 Rubber Anchor Nut

**Fitting note:** attach fixings loosely to start with - this helps with alignment of the hole centres.

Remove the left-hand side rider foot peg for access. Remove the OEM hugger from the bike. Be sure to retain all the fixings from the OEM hugger. The small silver collars removed with the OEM hugger will not be used.


Loosely attach the left-hand side bracket as shown in **Fig 1**.

Attach the right-hand side bracket as shown in **Fig 2** (insert the M4 rubber anchor nut into the hole in the swingarm first).


Position the Pyramid hugger over the rear tyre and attach as shown in **Fig 3, 4 & 5**.

Fully tighten all of the mounting points. Be sure to check fixings periodically.


**Fig 1**

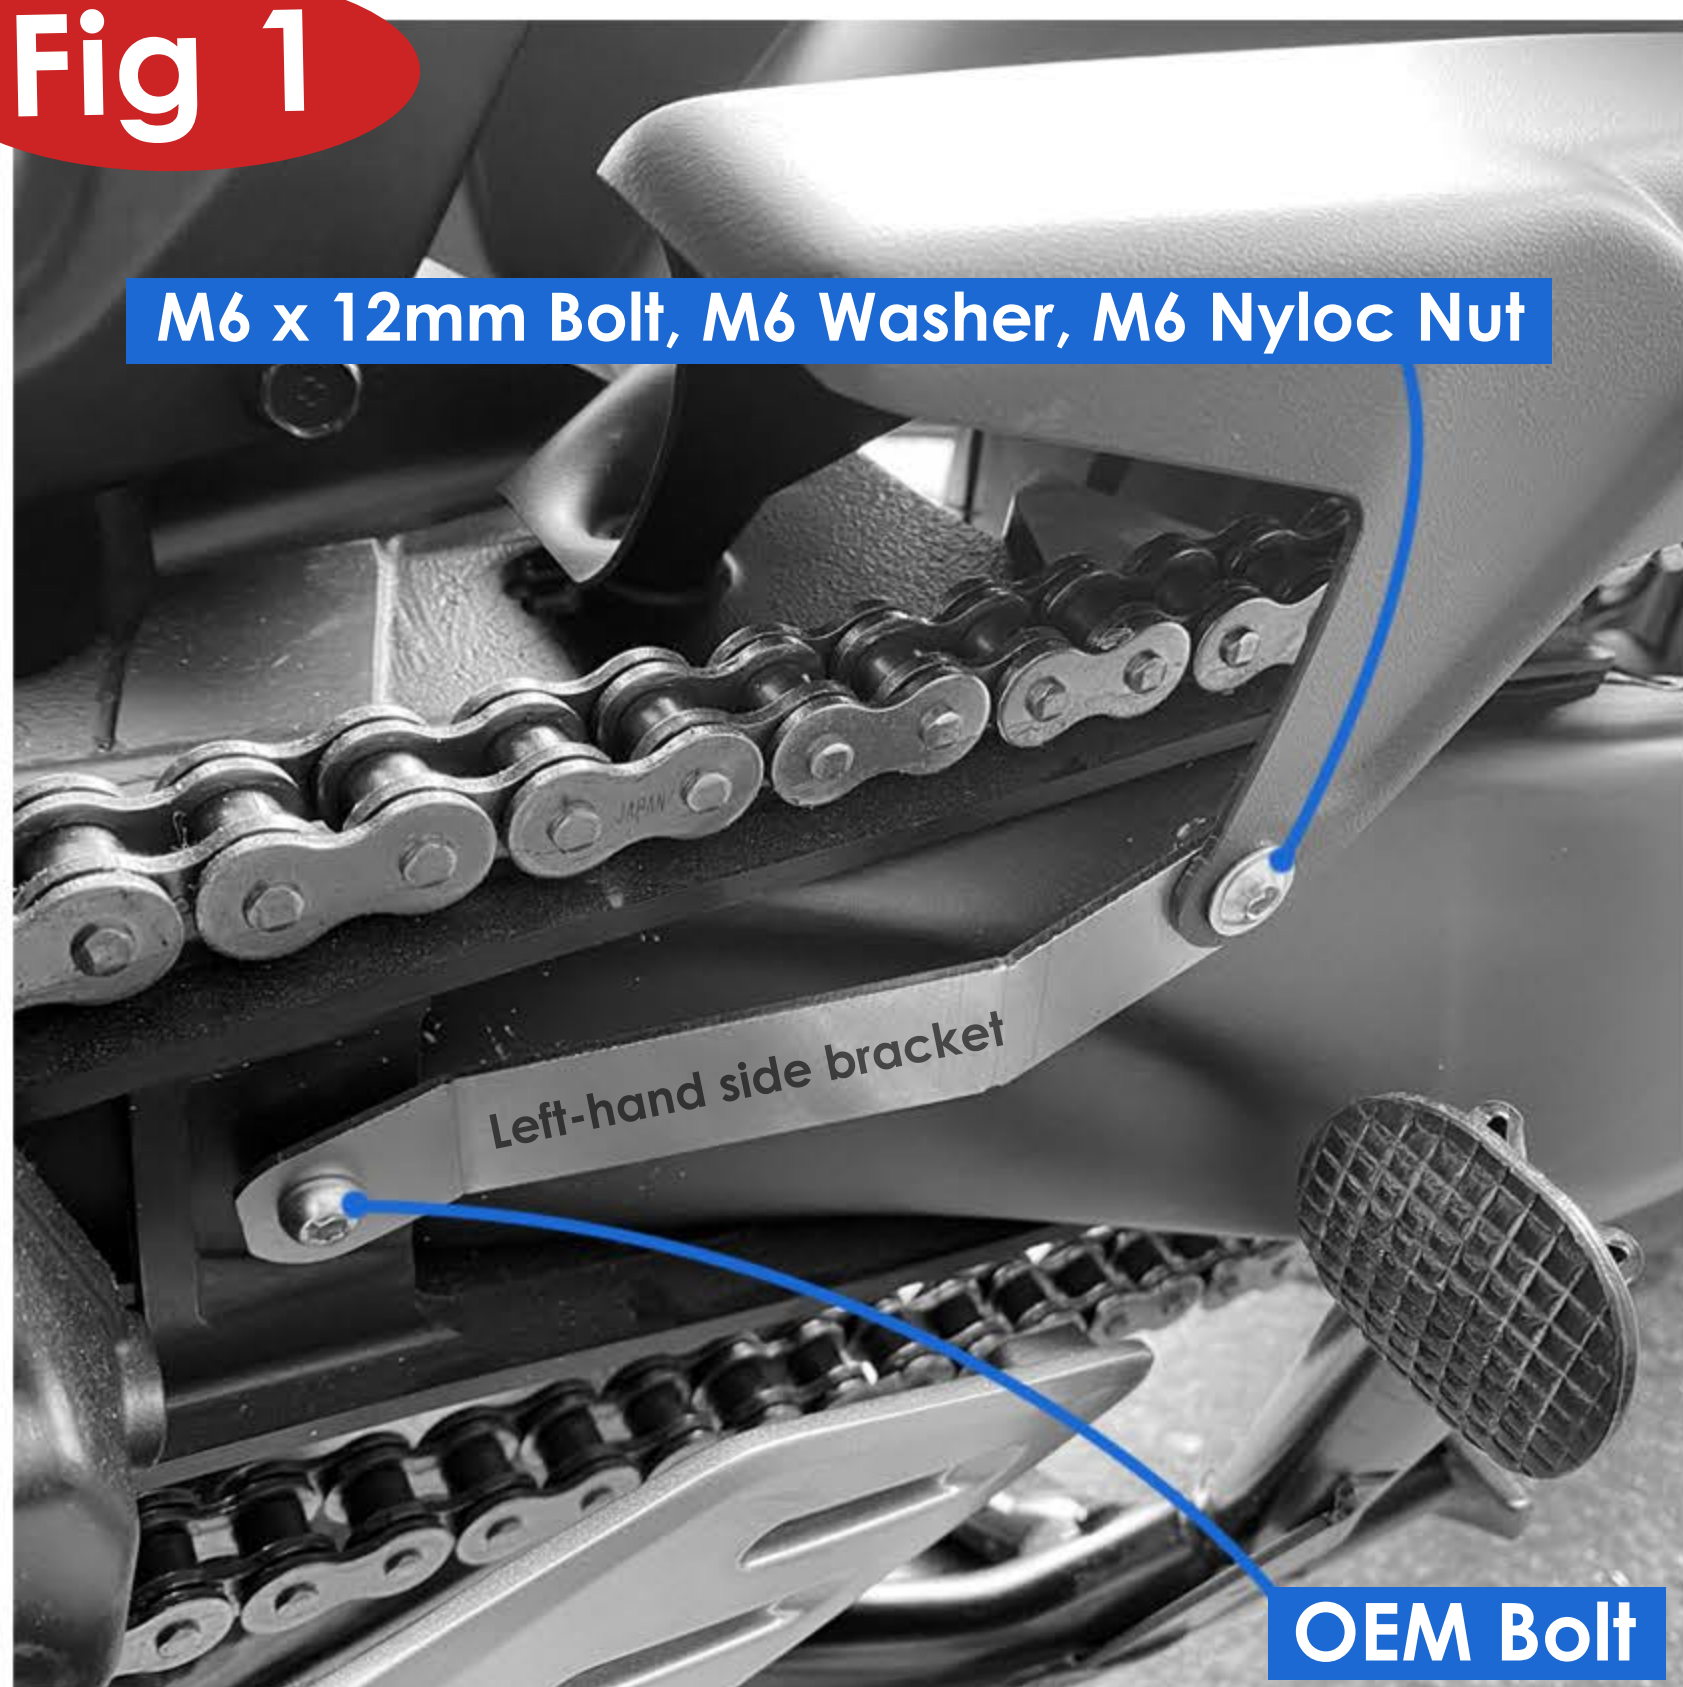


**Fig 2**

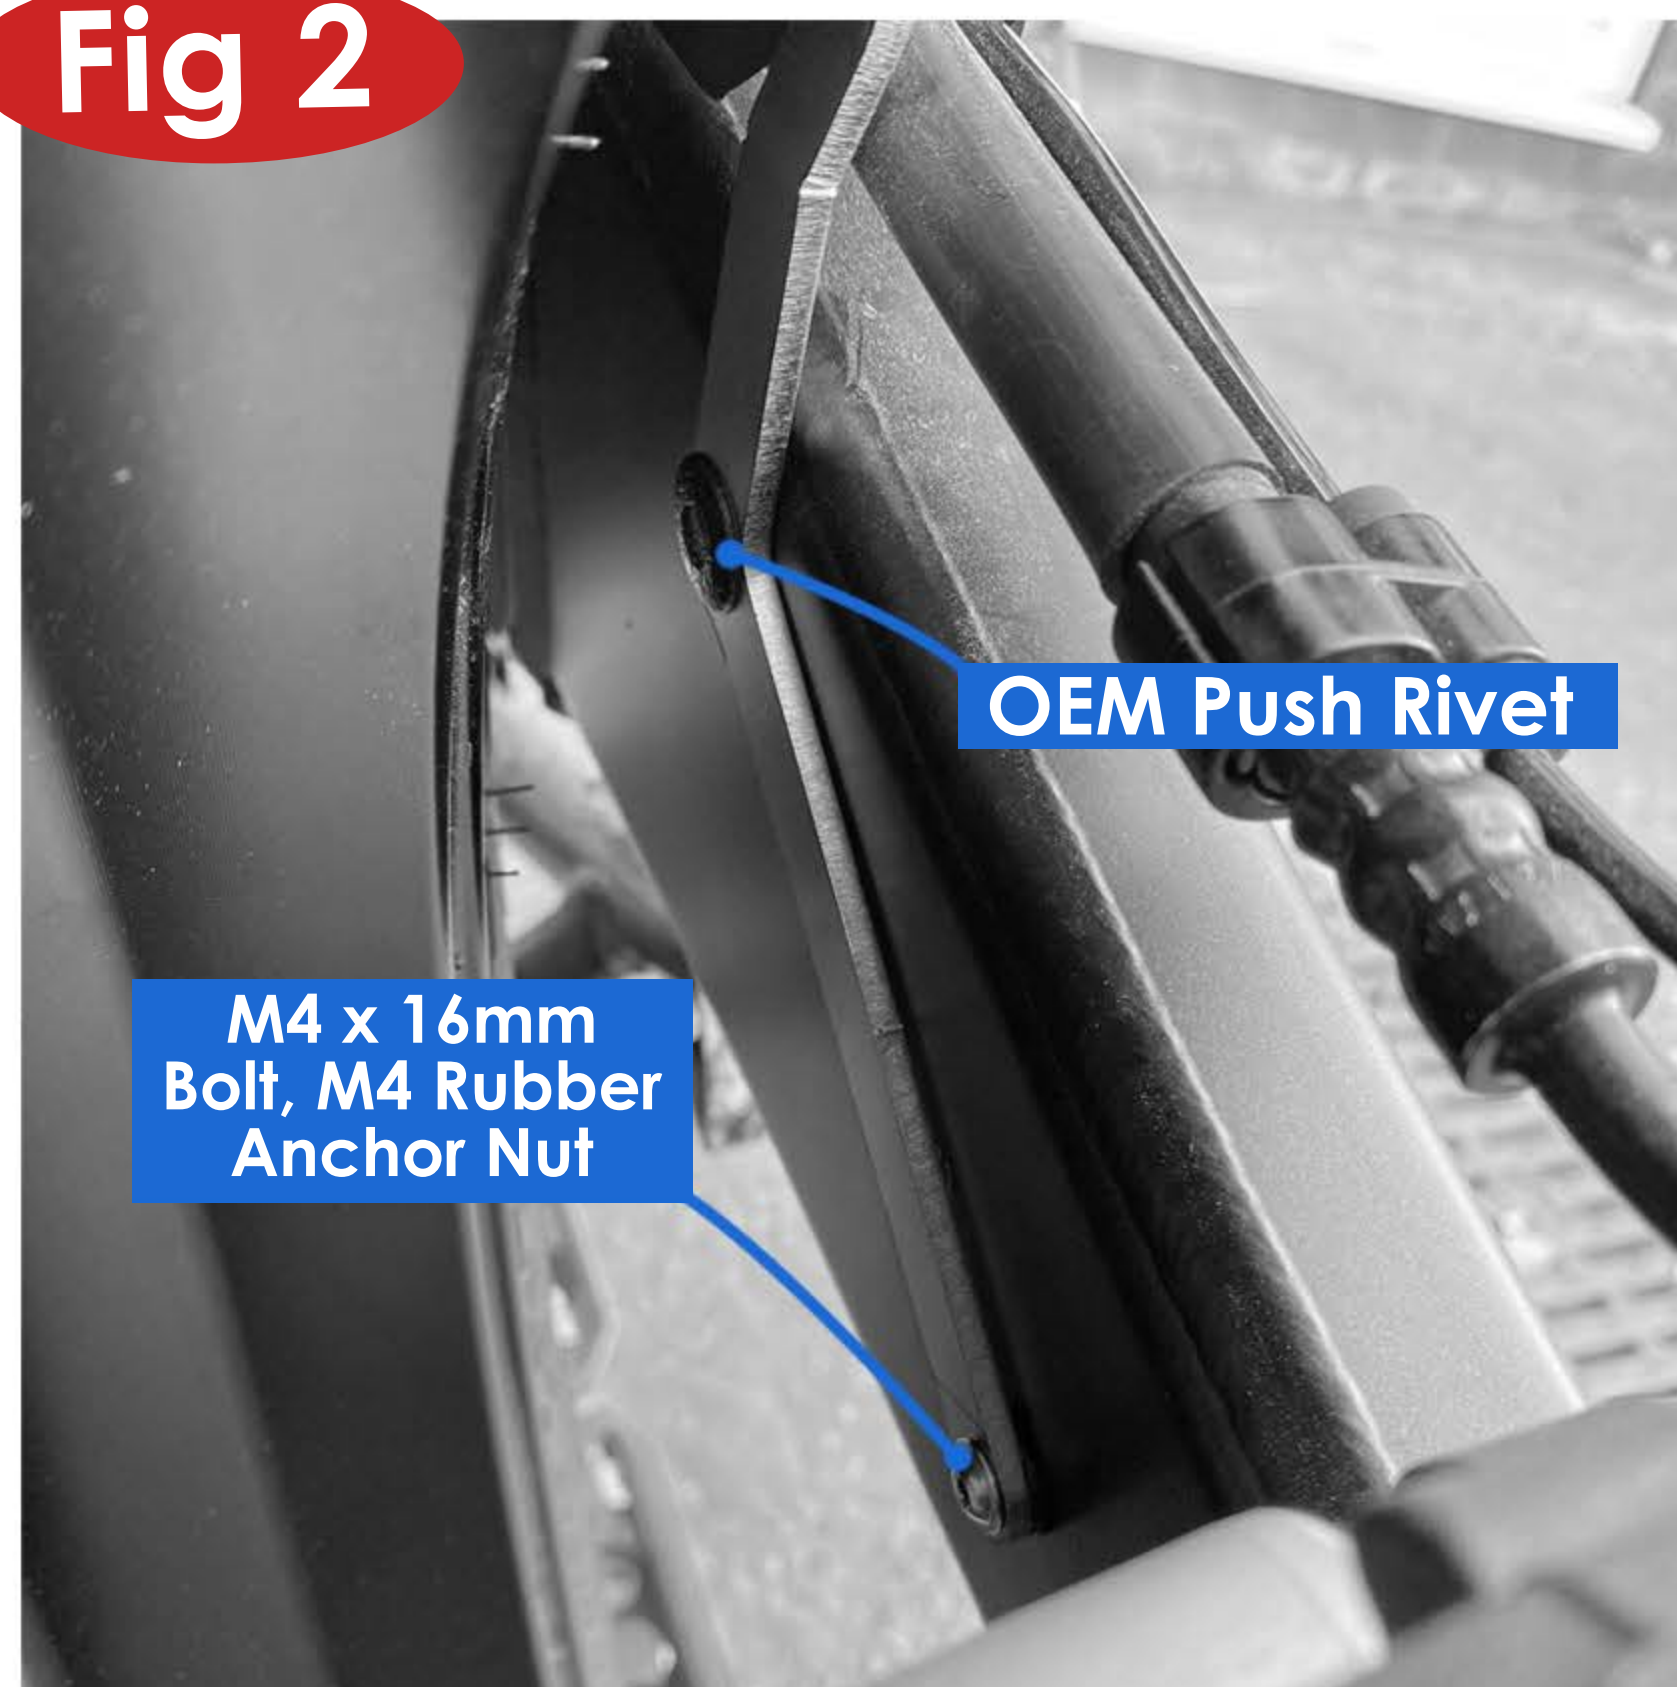


**Fig 3**

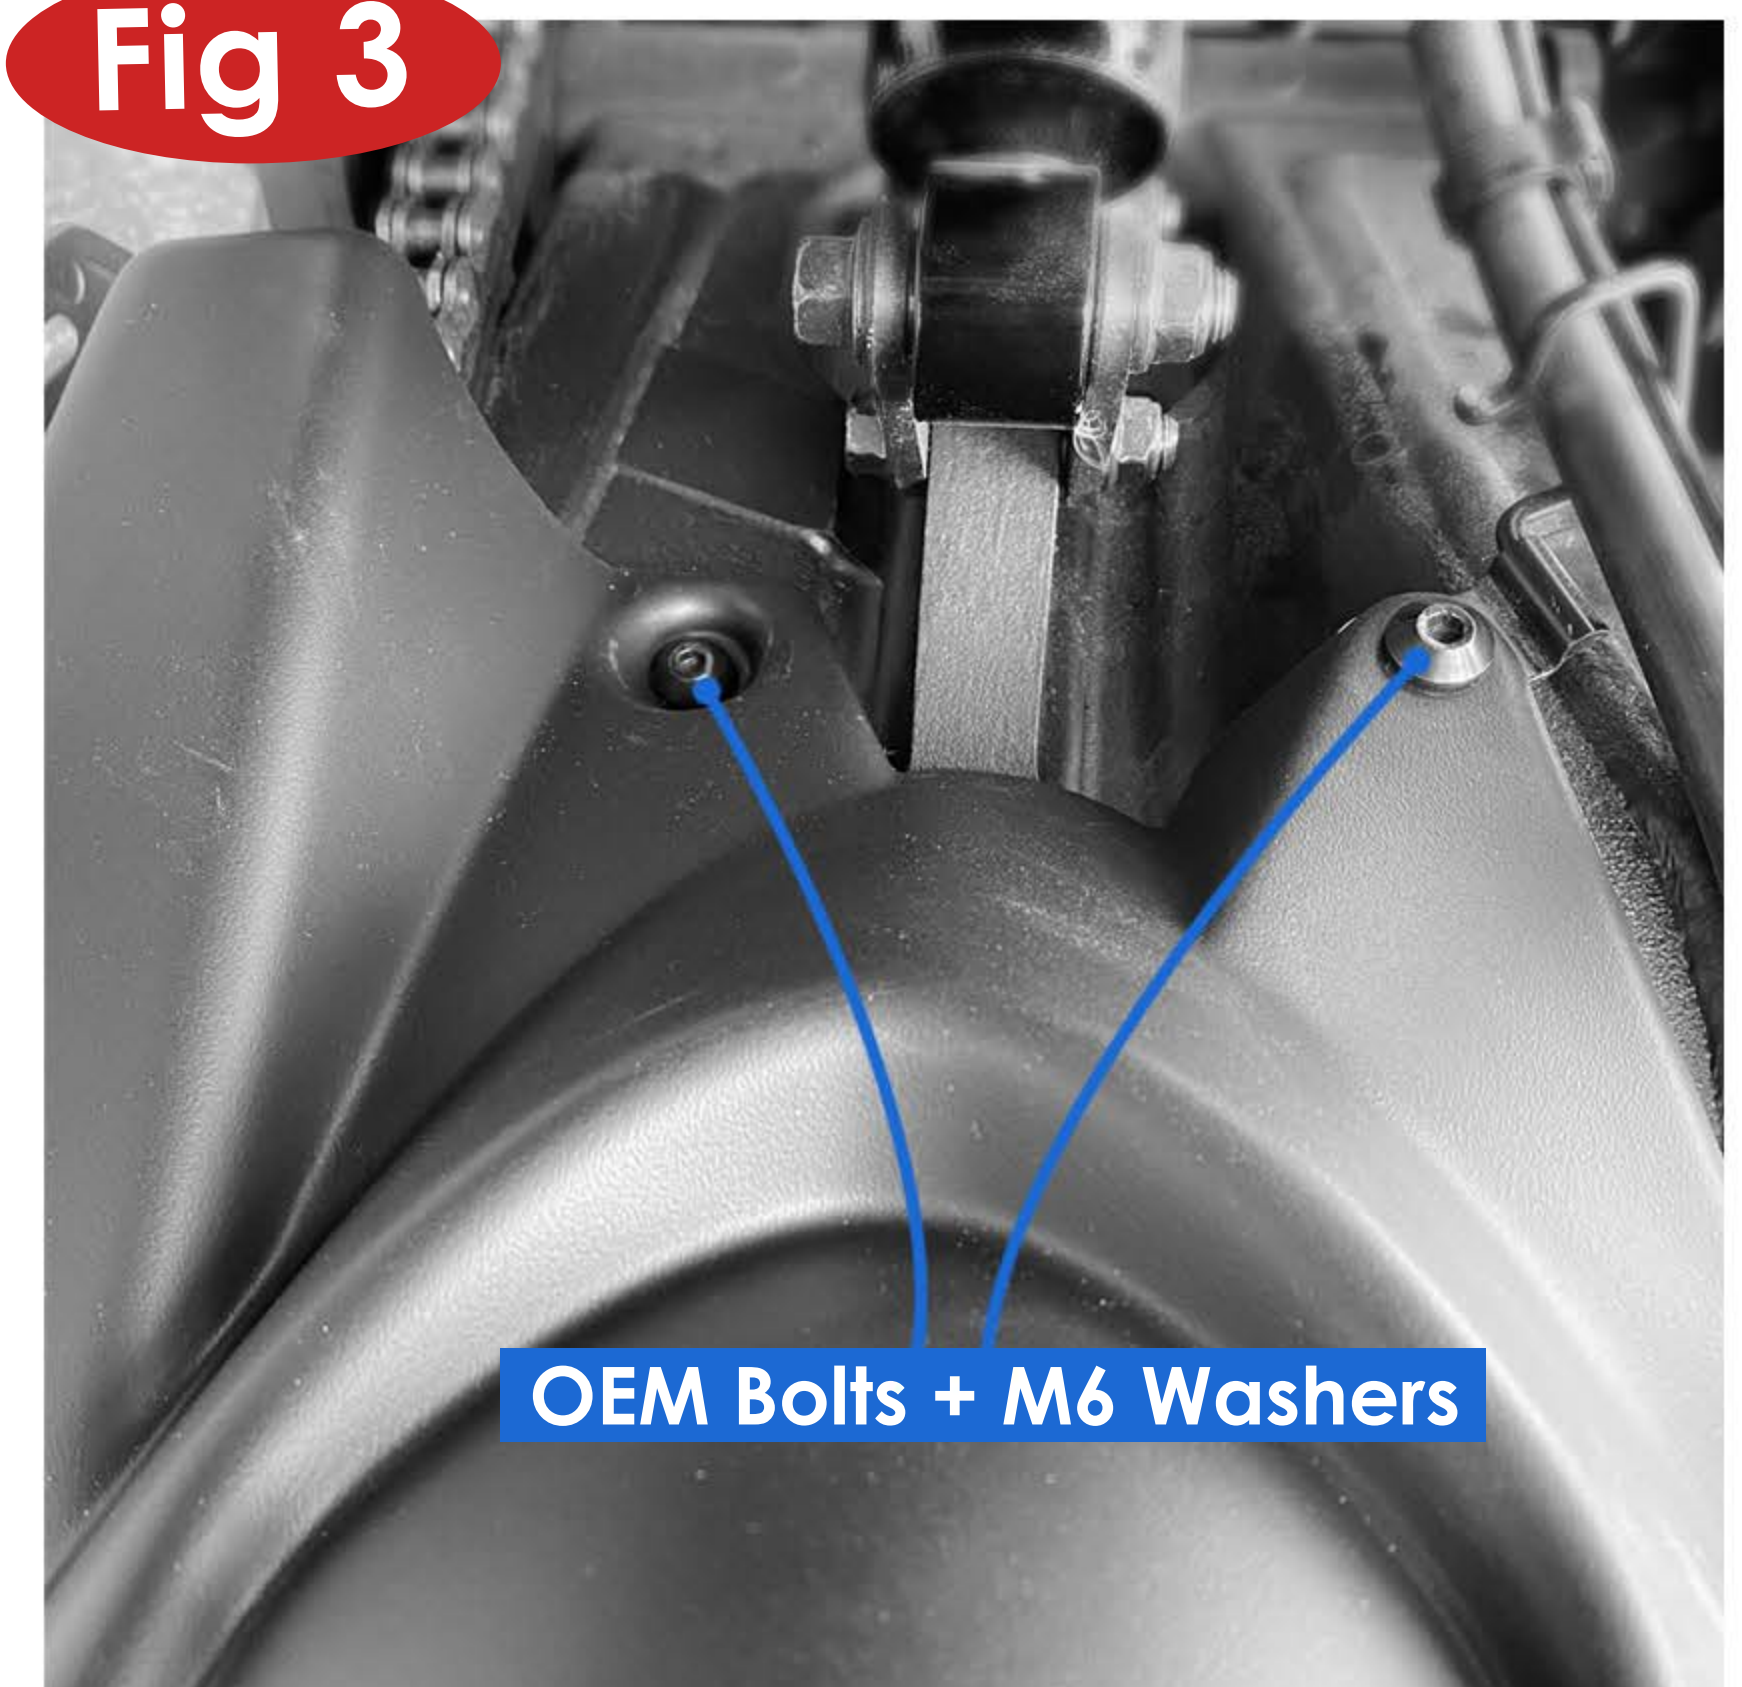

**Fig 4**

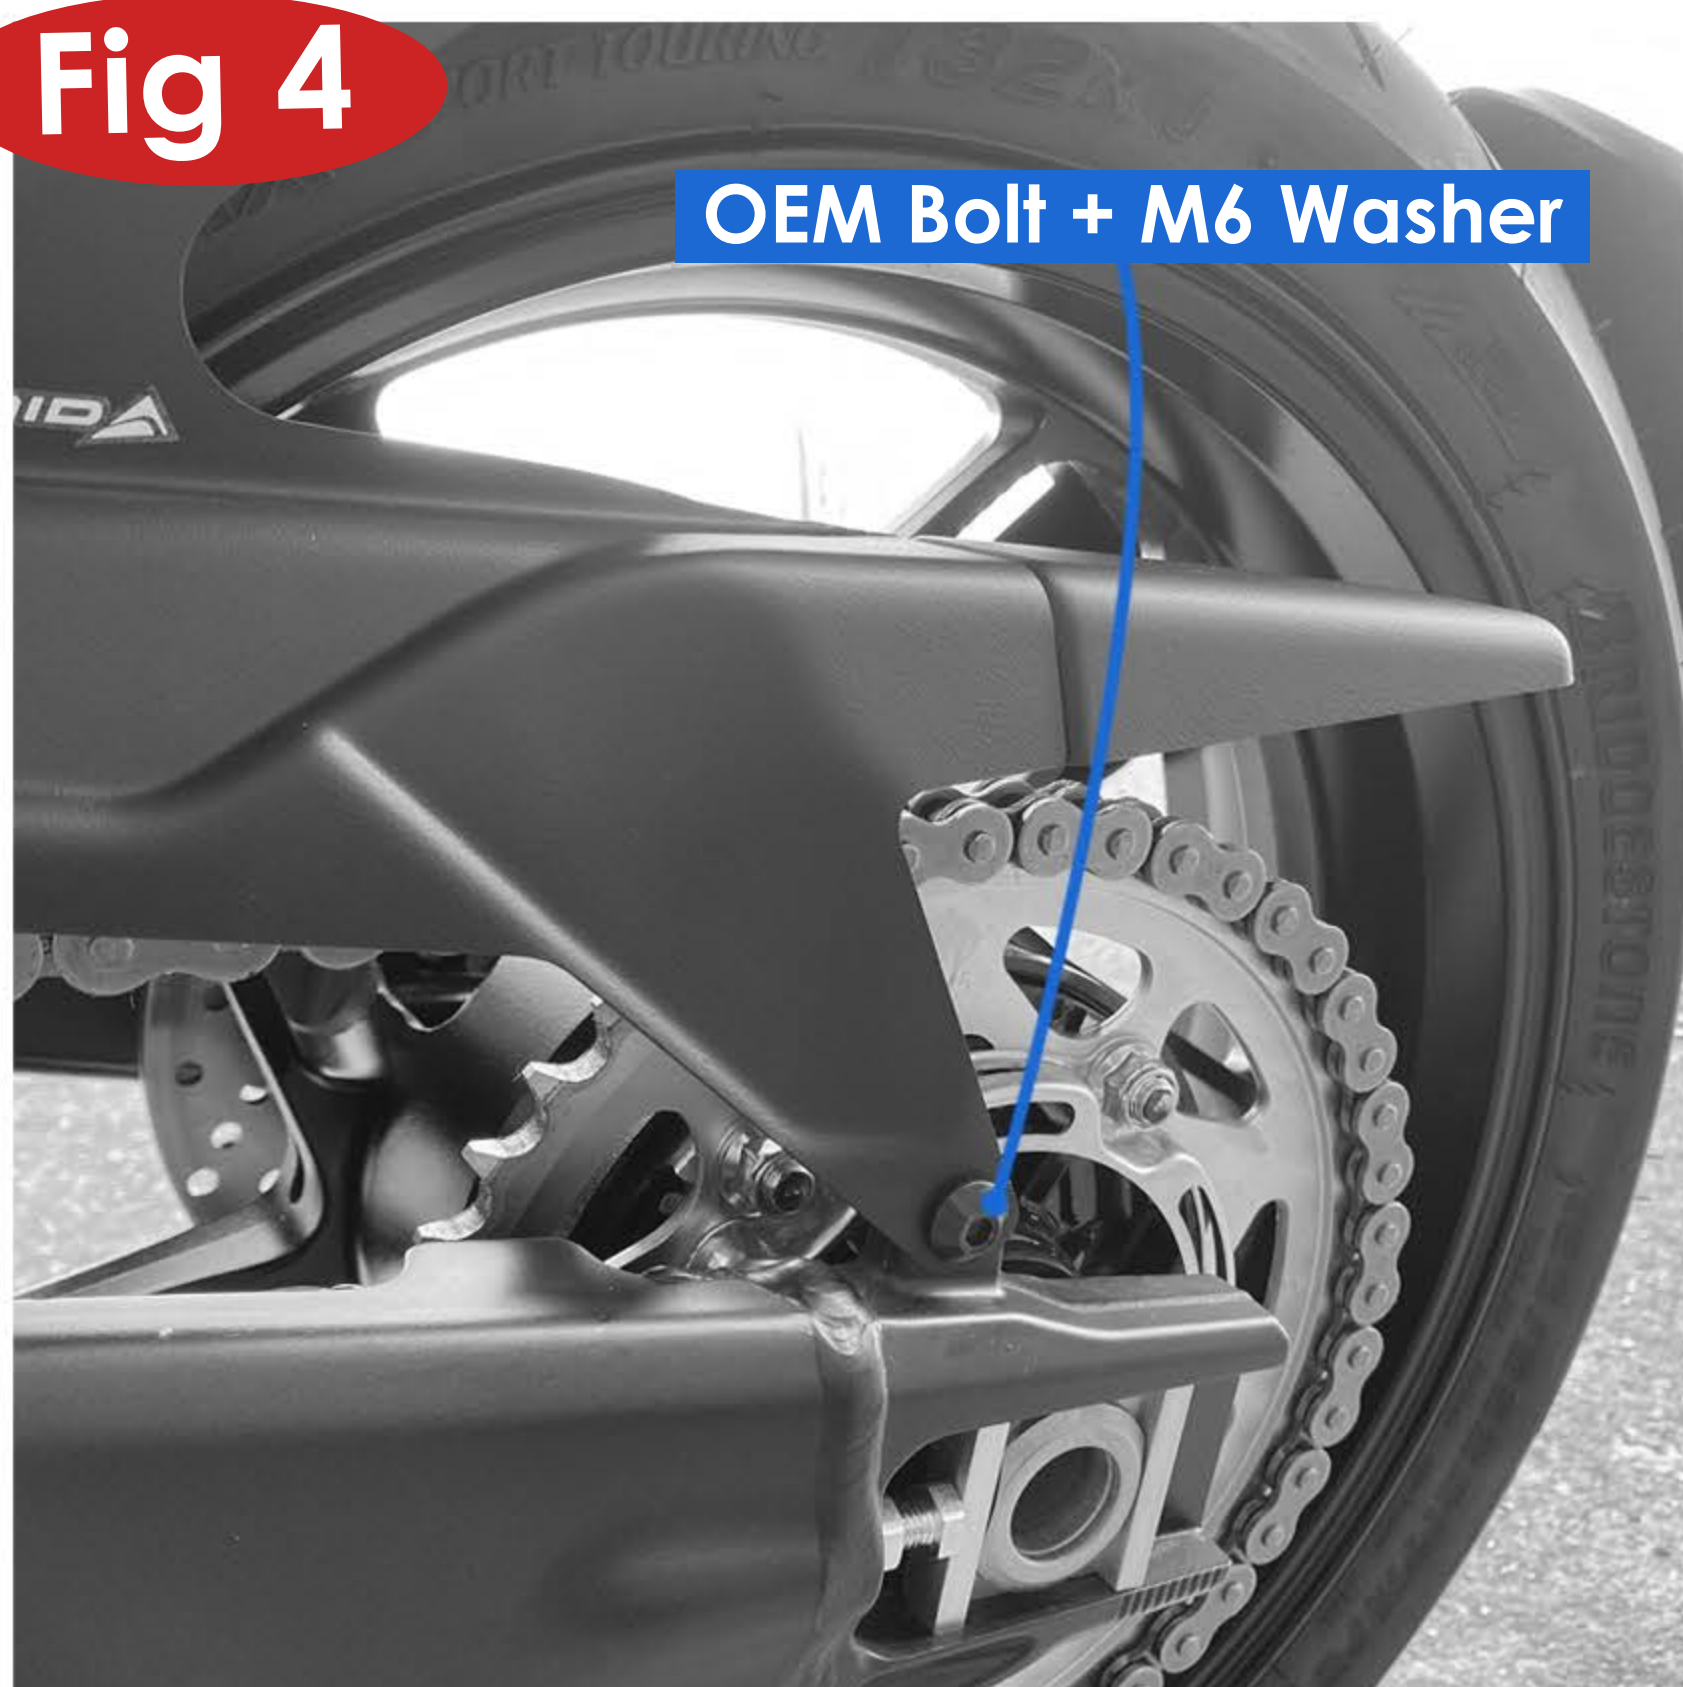

**Fig 5**

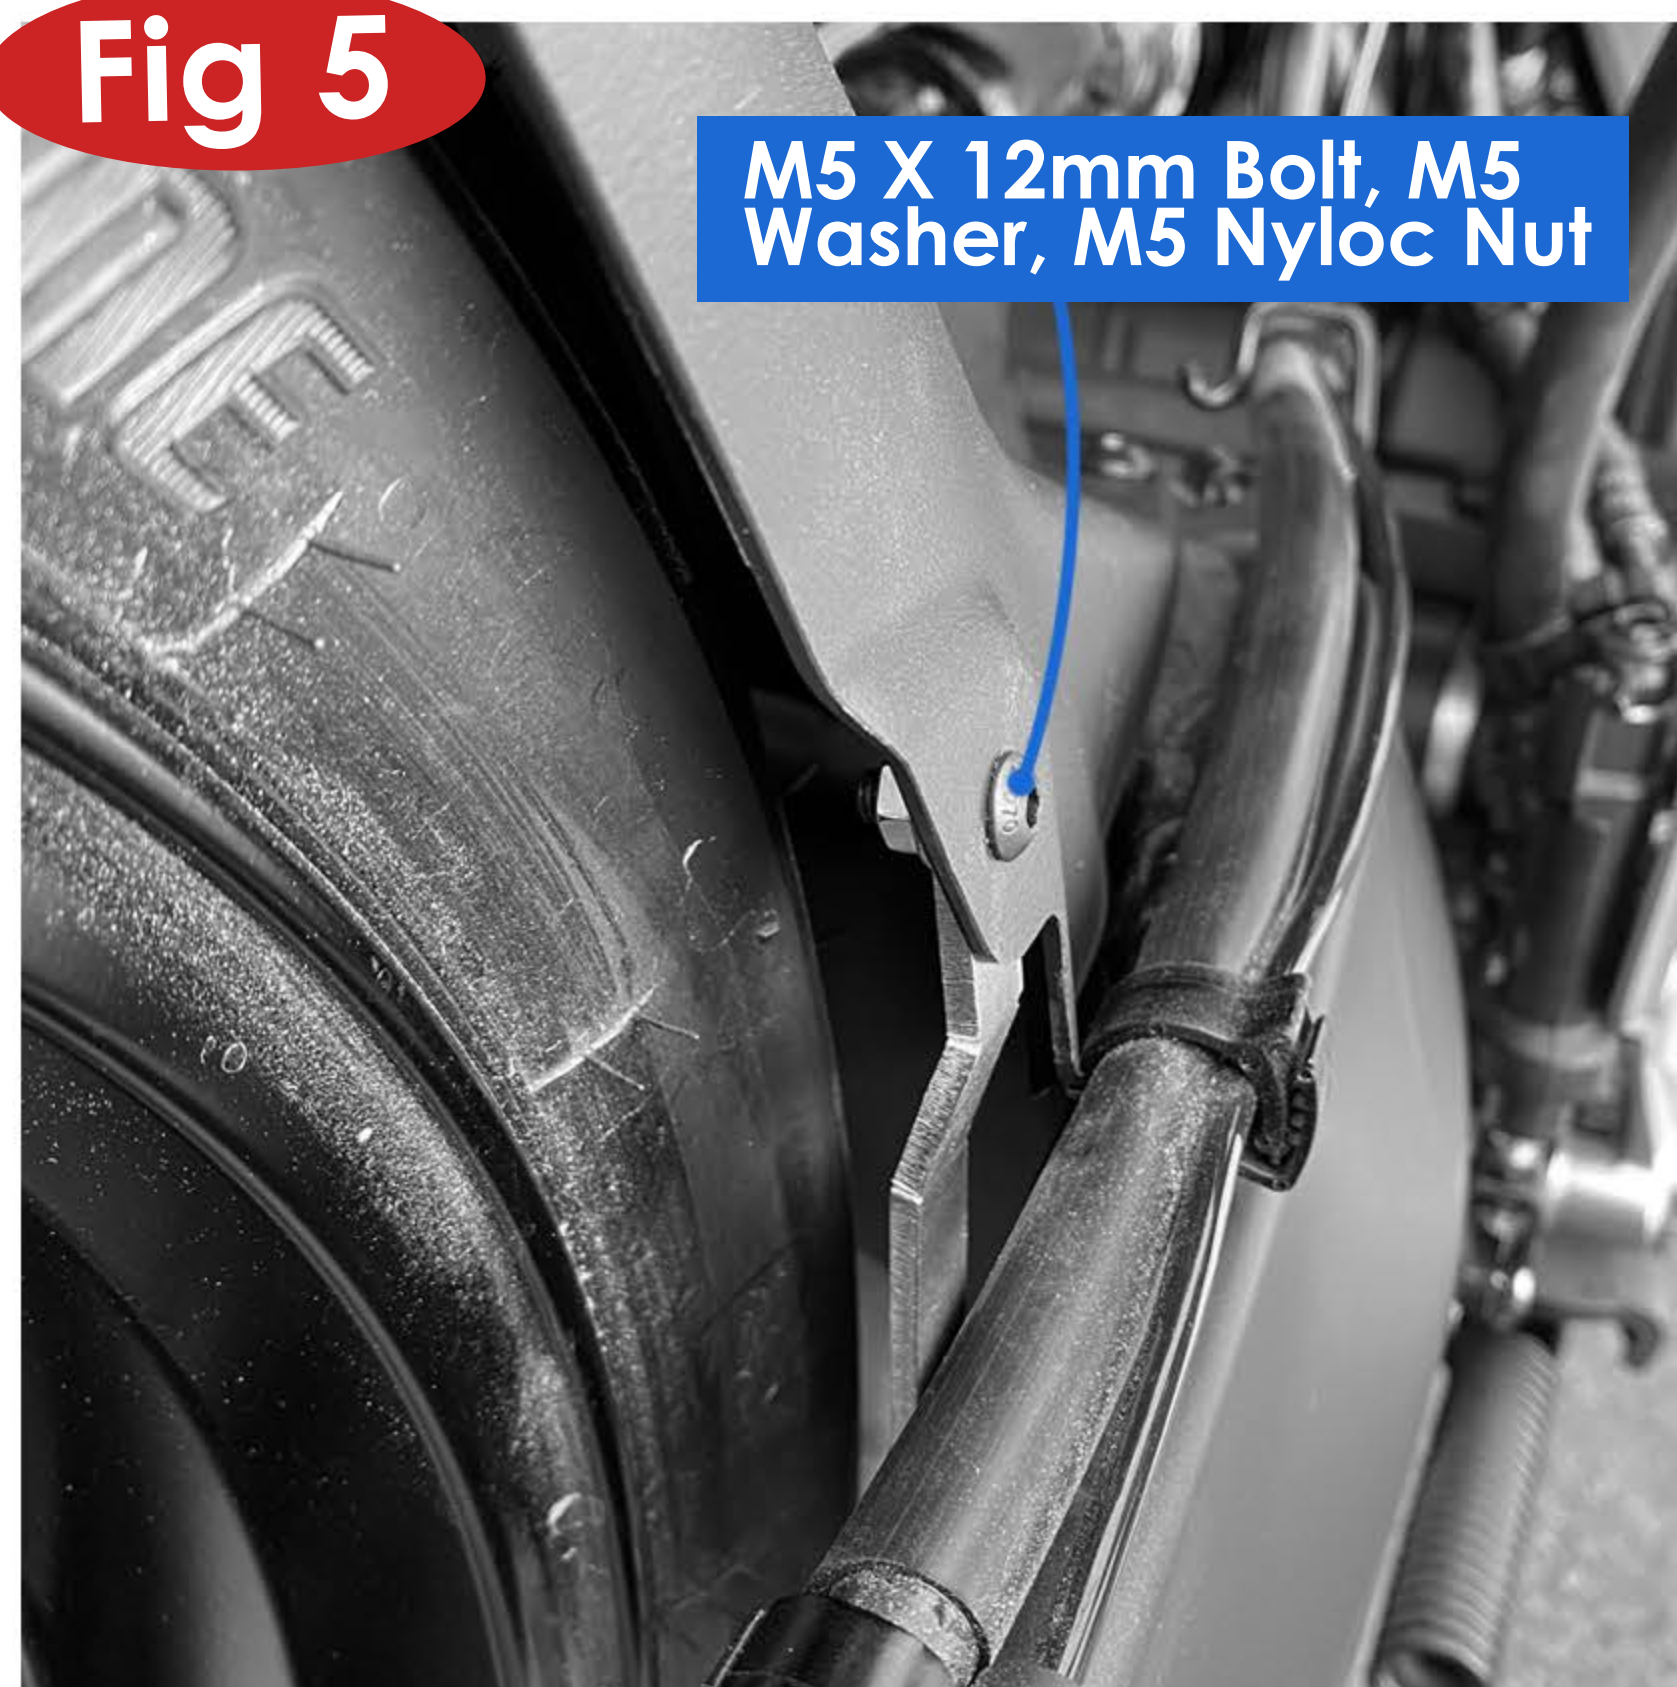

let's  
Ride

Any questions?  
[sales@pyramid-plastics.co.uk](mailto:sales@pyramid-plastics.co.uk)  
 +44 (0)1427 677990  
[www.pyramid-plastics.co.uk](http://www.pyramid-plastics.co.uk)



Follow us on social media and  
 feel free to leave us a review!