

Sturzpad-Kit HONDA CBF 1000 ('06 →) & CBF 1000 F ('10 →)
Frame Slider Kit HONDA CBF 1000 ('06 →) & CBF 1000 F ('10 →)

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M12	79 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

**Technische Änderungen vorbehalten.
Irrtümer ausgenommen.**

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW Motech takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M12	79 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

Subject to change. Not responsible for typos.


1 Sturzpad
Frame Slider



STP.00.590.001 01

Anzahl/ Pcs. 2


2 Logoplatte
Logo Plate

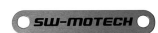

LOG.00.000.001 01

Anzahl/ Pcs. 2

3 Senkkopfschraube
Countersunk Screw




M3 x 12 DIN 7991

Anzahl/ Pcs. 4

STP.00.590.10000/B


4 Adapterplatte
Adapter Plate



STP.00.590.002 00

Anzahl/ Pcs. 2


5 Basisplatte
Mounting Plate



STP.00.590.003 02

Anzahl/ Pcs. 2

6 Innensechskantschraube
Hexagon Socket Screw



M6 x 40 DIN 912

Anzahl/ Pcs. 4

STP.01.590.80101/B

7 Innensechskantschraube
Hexagon Socket Screw



FEINGEWINDE
M12 x 1,25 x 95 DIN 912

Anzahl/ Pcs. 1

8 Innensechskantschraube
Hexagon Socket Screw



FEINGEWINDE
M12 x 1,25 x 80 DIN 912

Anzahl/ Pcs. 1


9 Distanzbuchse
Spacer



Da:20 Di:12,5 h:8




Anzahl/ Pcs. 2

10 Distanzbuchse
Spacer



Da:20 Di:12,5 h:10

Anzahl/ Pcs. 1

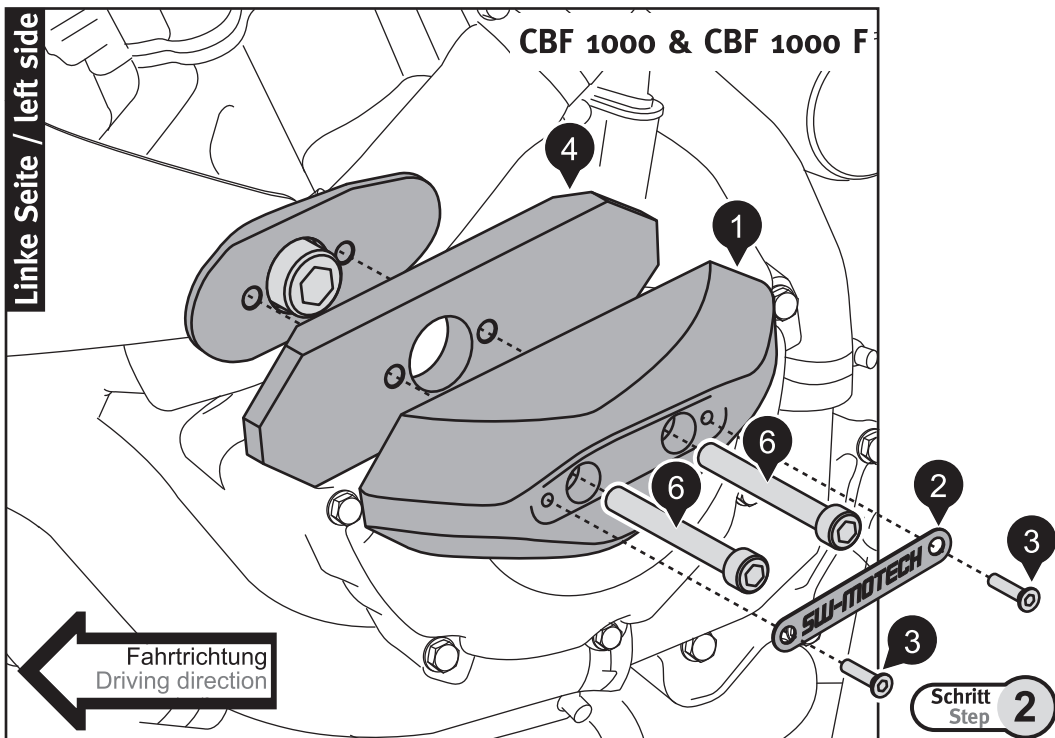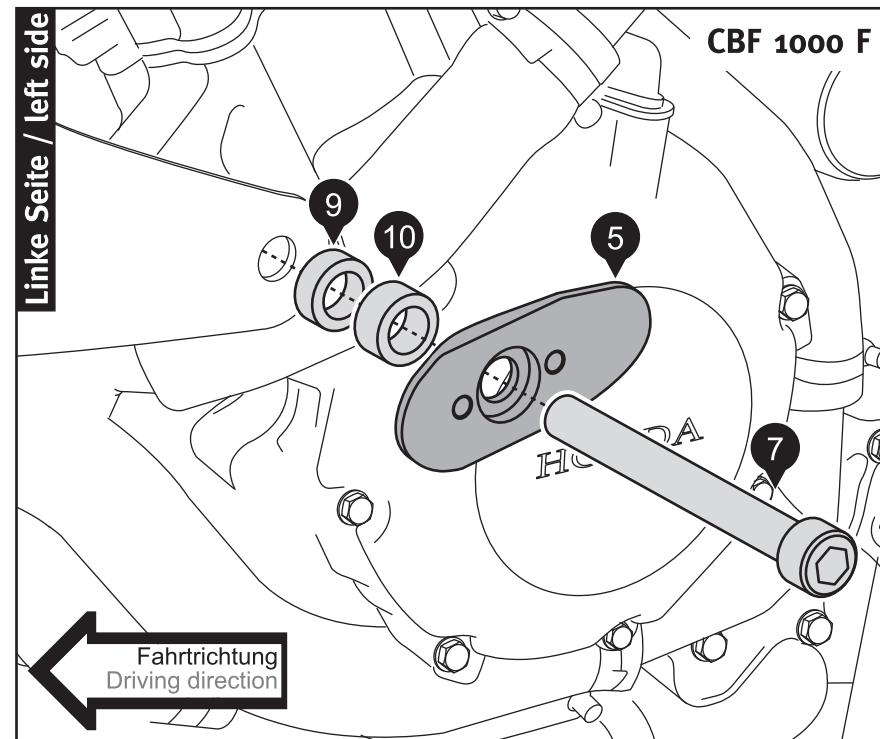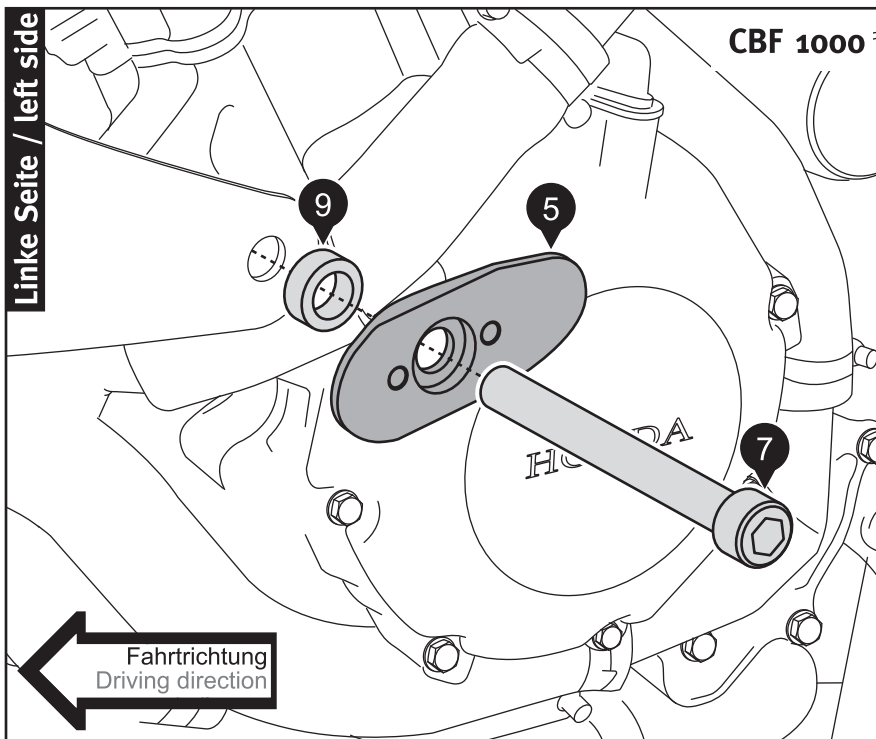

INFORMATION

Montieren Sie die Teile (5), (7) und (9), wie in **Schritt 1** gezeigt. Achten Sie darauf, beim Modell **CBF 1000 F** auf der linken Seite zusätzlich Distanzbuchse (10) wie gezeigt zu verbauen. Richten Sie vor dem Anziehen der Schraube (7) die Basisplatte (5) entsprechend der Linienführung des Fahrzeugs aus. Ziehen Sie Schraube (7) an. Achten Sie dabei auf das vom Hersteller vorgeschriebene Anzugsmoment. Montieren Sie nun die restlichen Teile (1), (2), (3), (4) und (6), wie in **Schritt 2** gezeigt.

Achtung: Montieren Sie das Sturzpad erst auf der linken Seite, dann auf der rechten Seite. Entfernen Sie die originalen Motorhalteschrauben keinesfalls auf beiden Seiten gleichzeitig. Benutzen Sie auf der rechten Seite Schraube (8).

Attach part (5), (7), and (9) as shown in **step 1**. Make sure to use spacer (10) at the left side of the **CBF 1000 F** model as shown. Do not fully tighten screw (7). Adjust the mounting plate (5) according to the alignment of the motorcycle. Now tighten screw (7). Pay attention to the manufacturer's specified torque. Then attach the parts (1), (2), (3), (4) and (6), as shown in **step 2**.

Attention: First attach the frame slider on the left side, then on the right side. Never attach both frame sliders, or remove both engine bolts at the same time. Use on the right side screw (8).