

36111 Triumph Tiger 1200 Engine Guard Fitting Instructions

Kit Includes:

1X	C36111	Engine Guard
5X	C36111	Brackets
1X	CBOL0299	M8 x 20mm Hex Head Bolt
10X	CBOL0123	M6 X 12mm Flanged Button Head Bolt
10X	CWAS0221	M6 Plastic Washer
6X	CBOL0106	M5 X 12mm Button Head Bolt
6X	CWAS0100	M5 Plastic Washer
6X	CWAS0105	M5 Steel Washer
6X	CNUT0150	M5 Nyloc Nut
6X	CNUT0210	M6 Aluminium Rivet Nuts (Pre-fitted to brackets by Pyramid)





Helpful notes: We advise the use of the centre stand where possible for better access when fitting. Place something soft underneath the bike when positioning the engine guard to avoid damage. A small box/block of the appropriate size can be useful for positioning/fitting the engine guard.

Attach the two small brackets to the engine guards using M5 fittings supplied (see **Fig 1**) and fully tighten.

Attach the brackets to the engine using the M6 and M8 fittings as shown in **Fig 2, 3 & 4** below (fully tighten).

Attach the engine guard to the brackets using the M6 fittings supplied (loosely tightening to begin with is helpful for a successful fit).

Check fixings periodically.

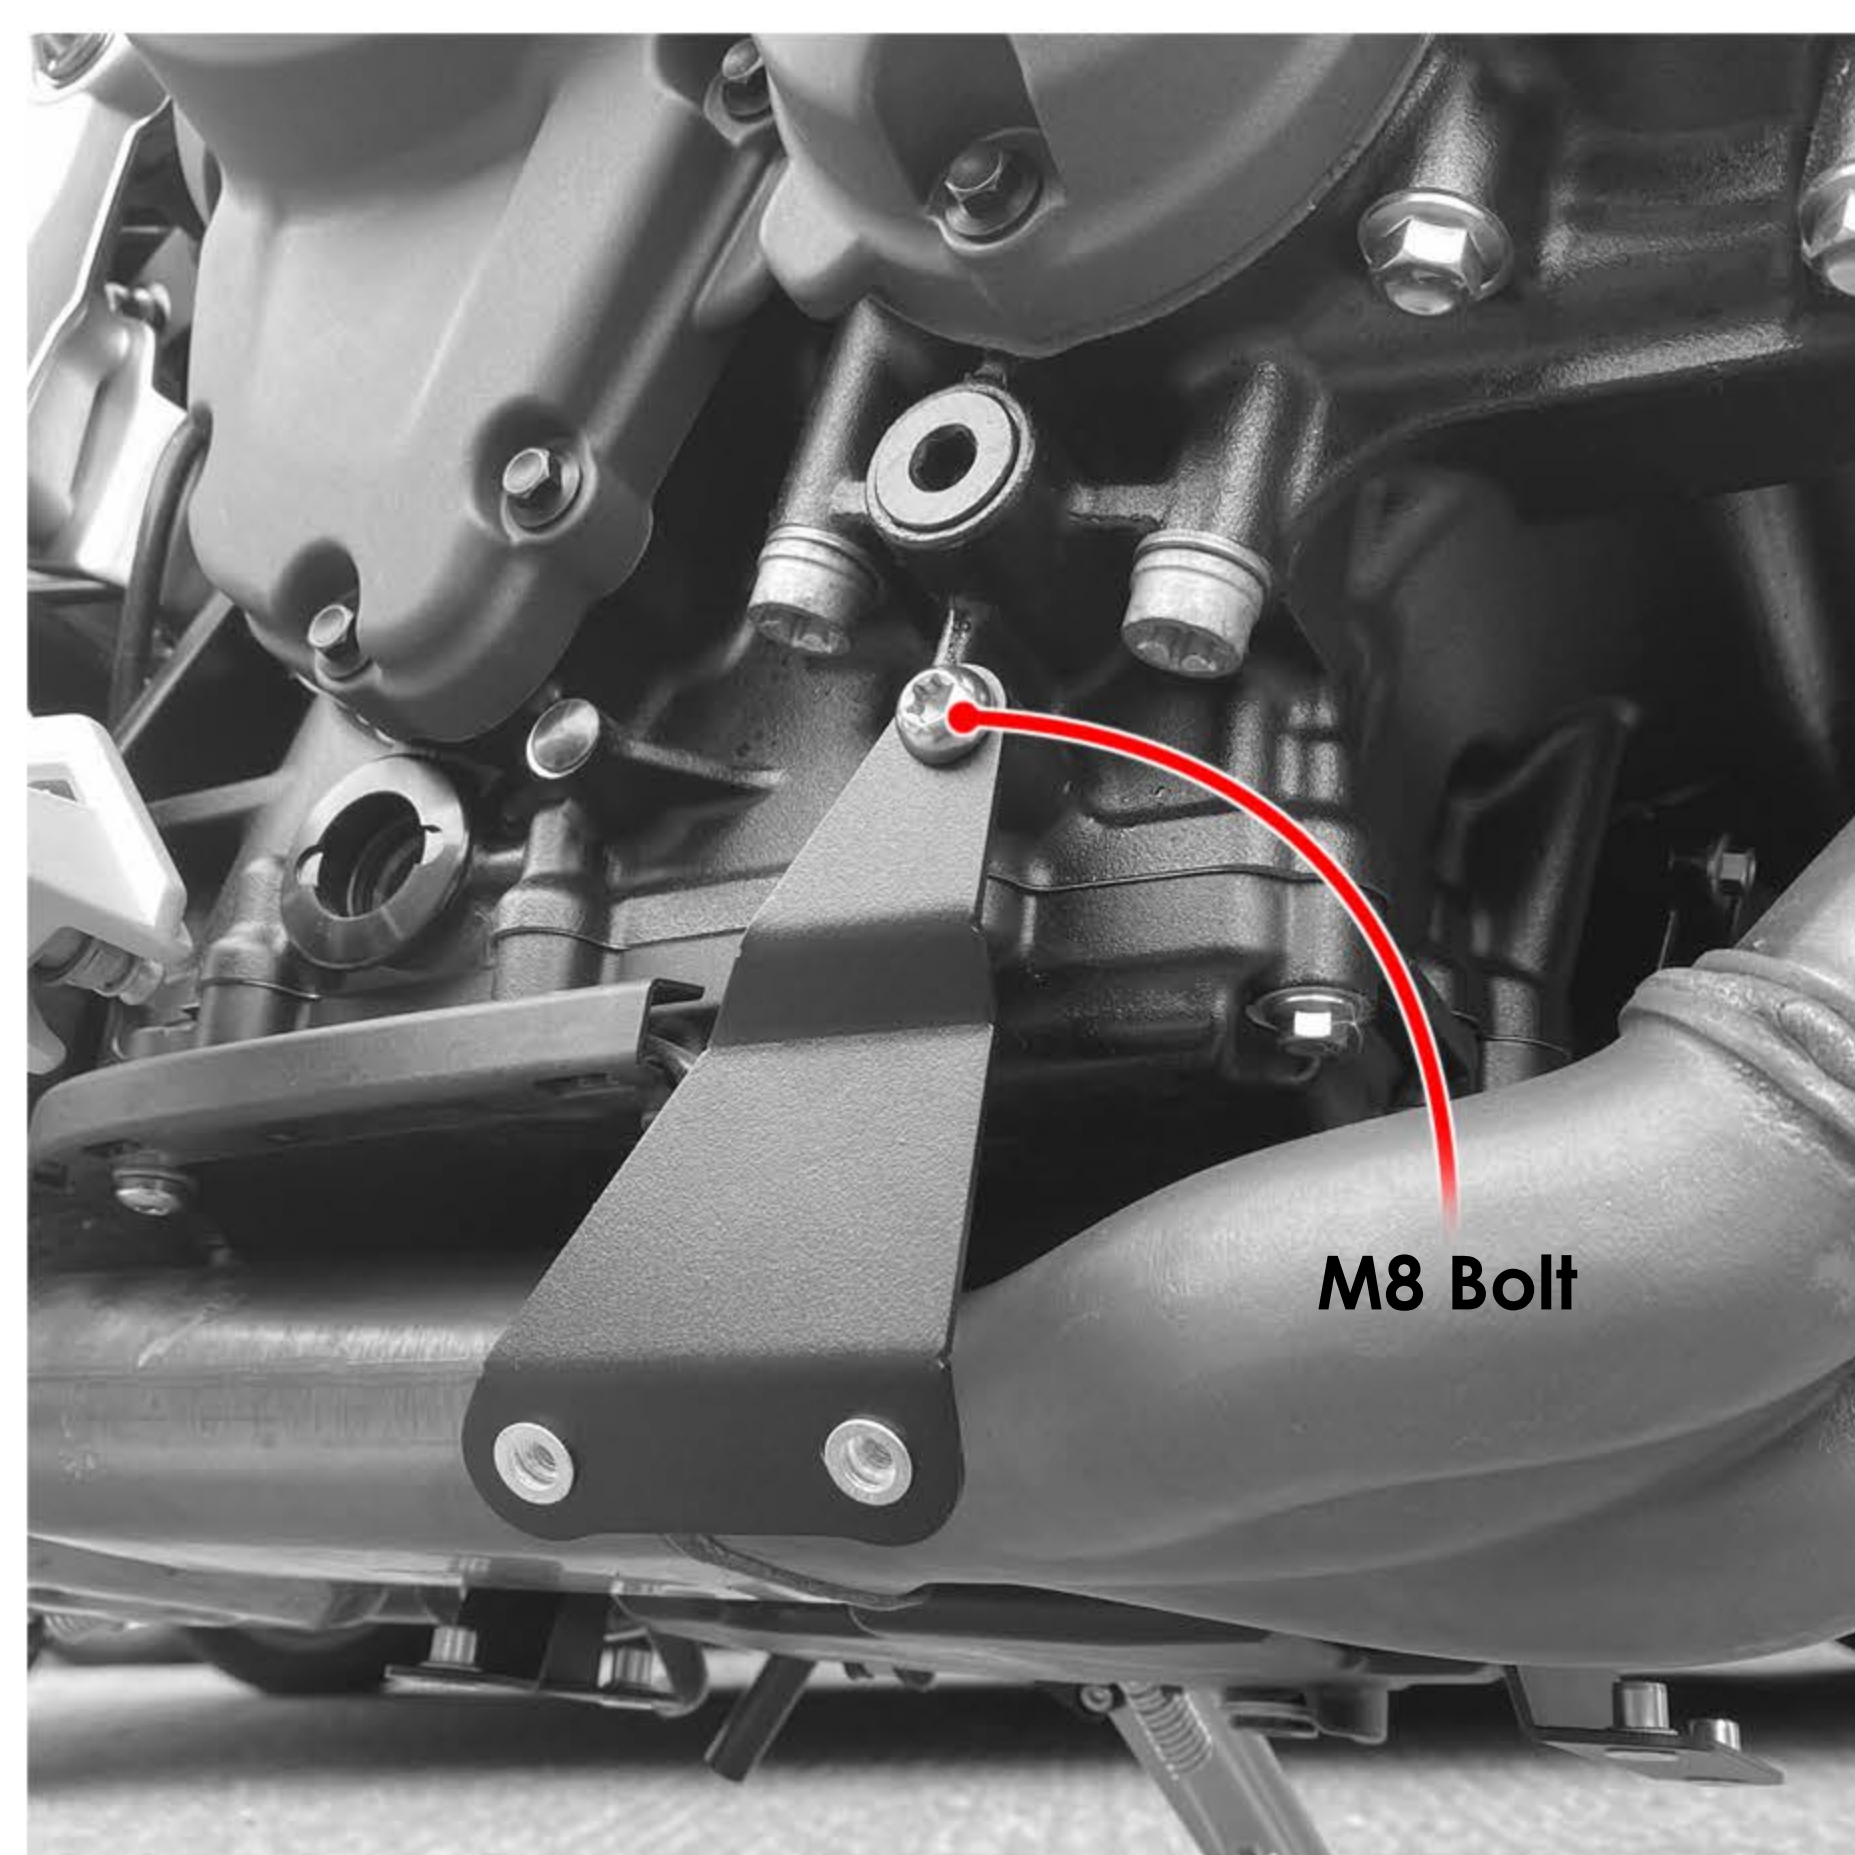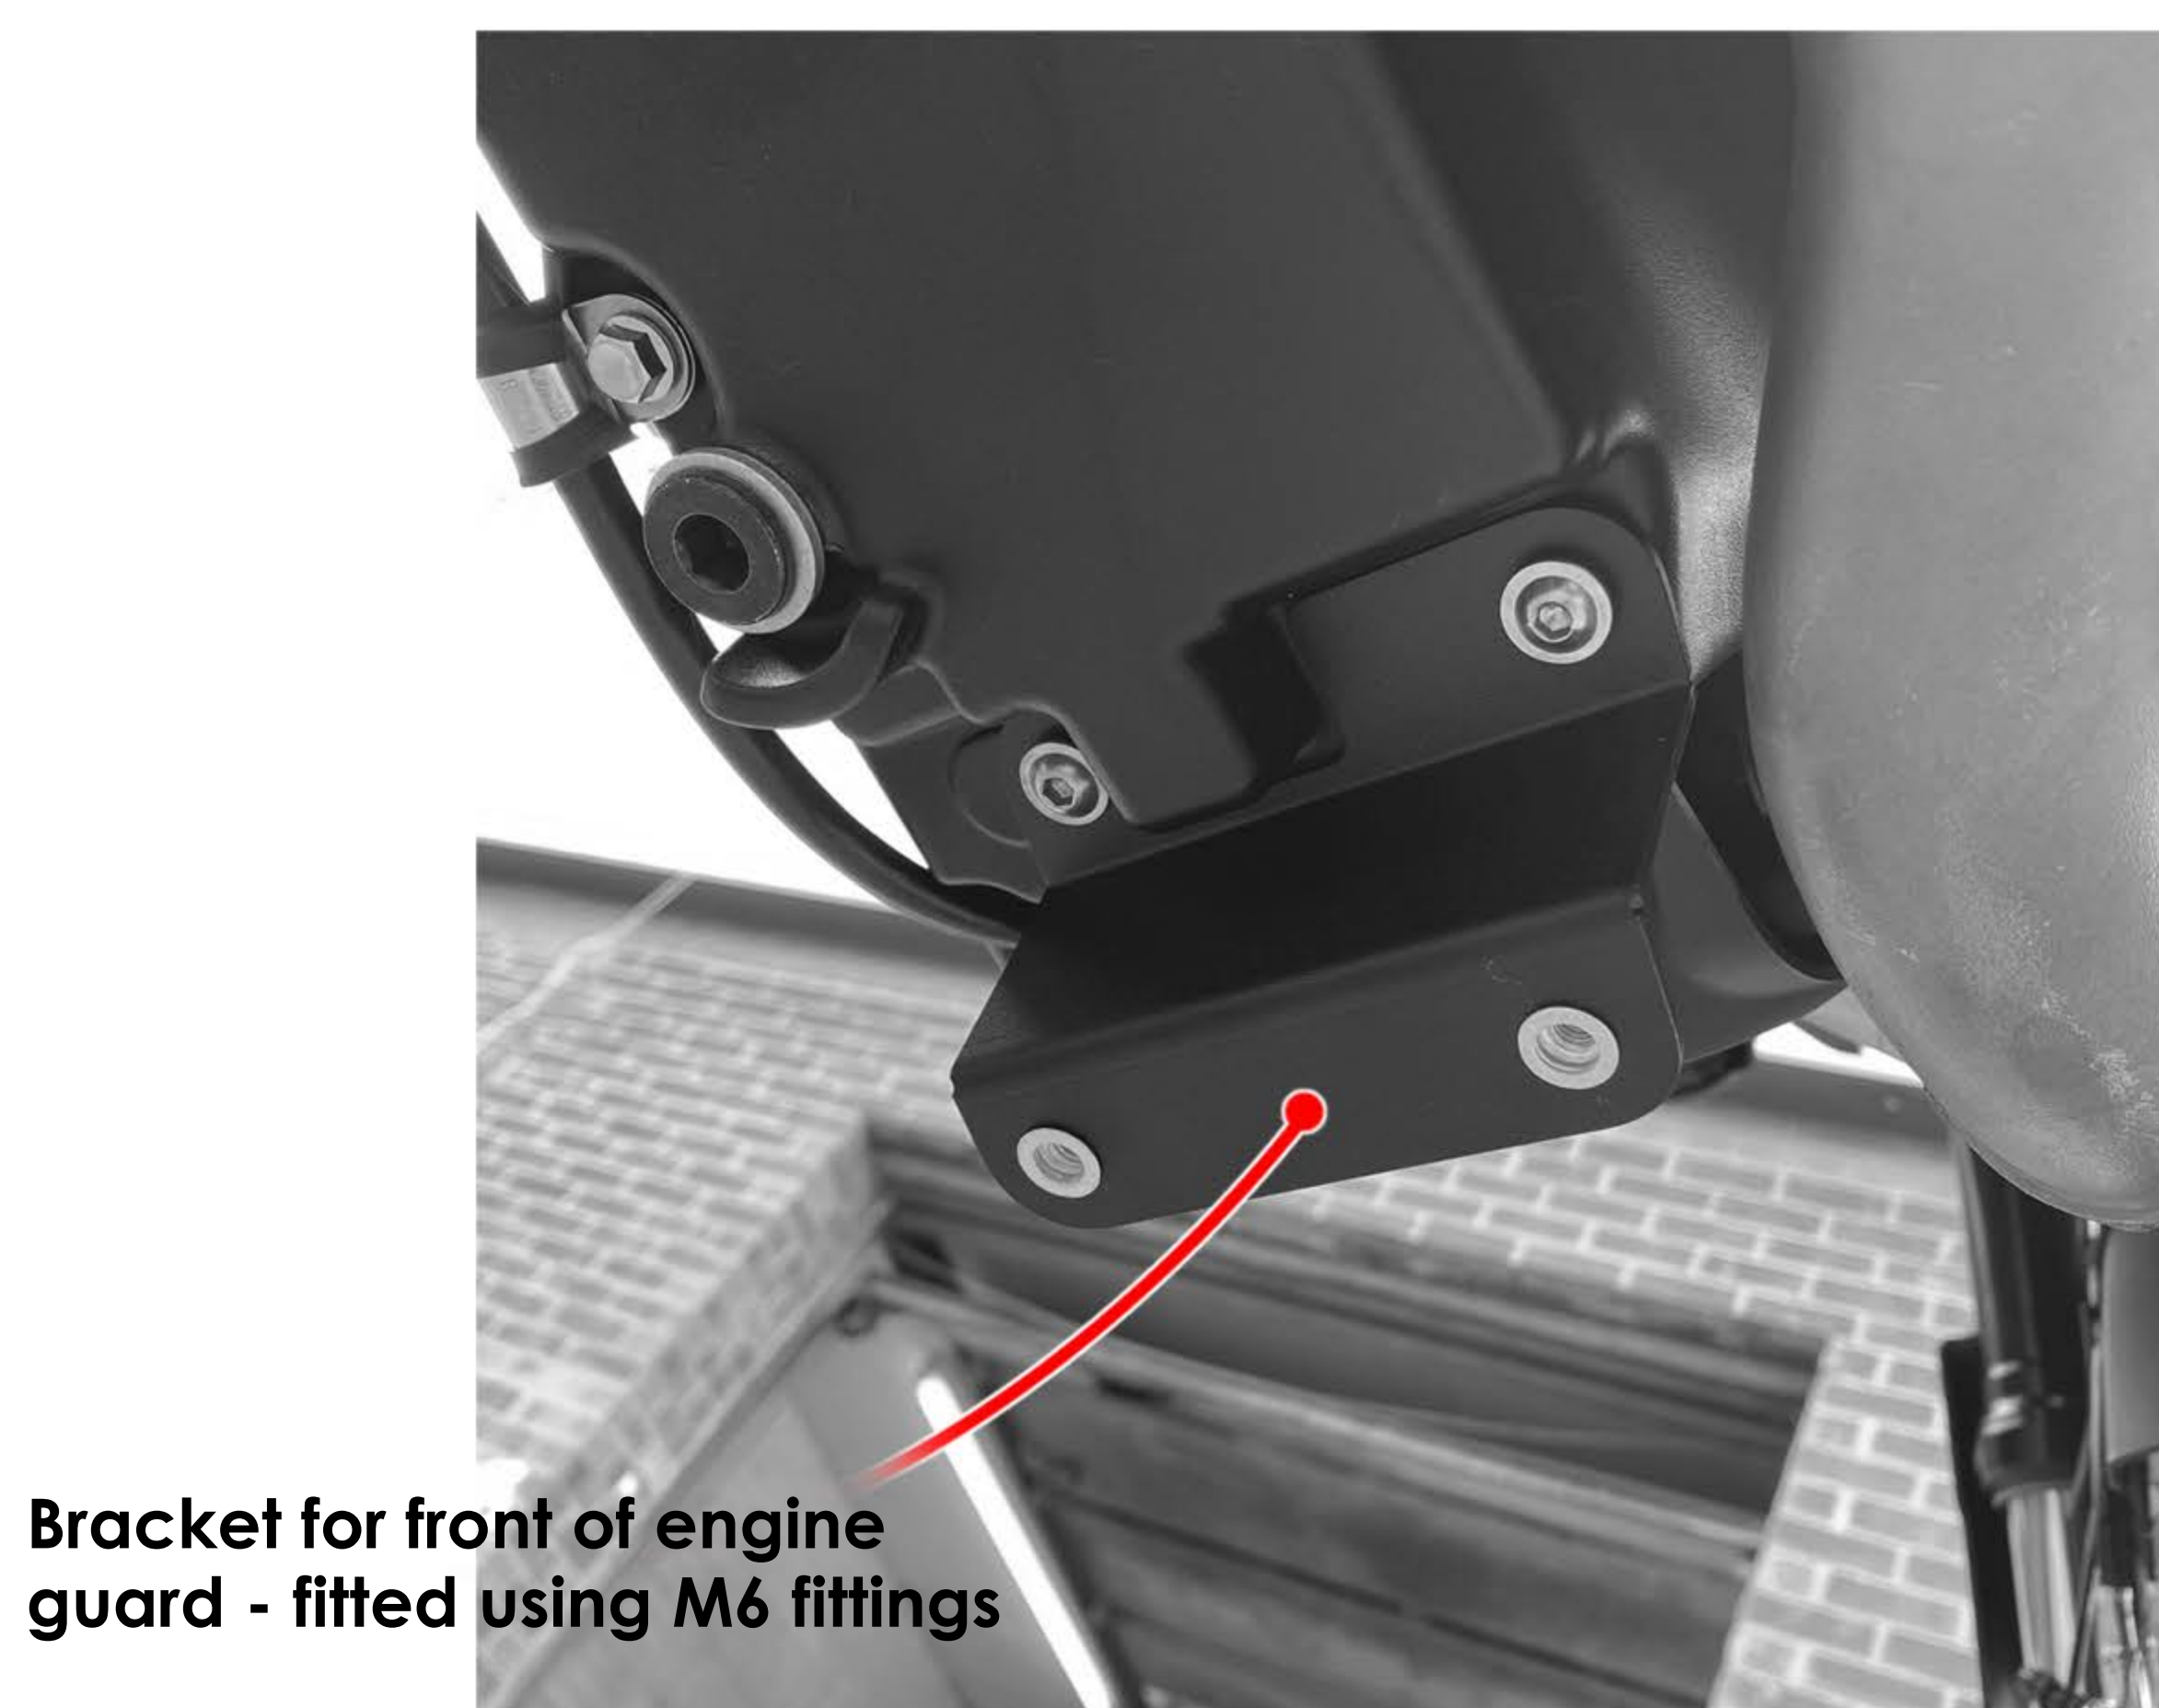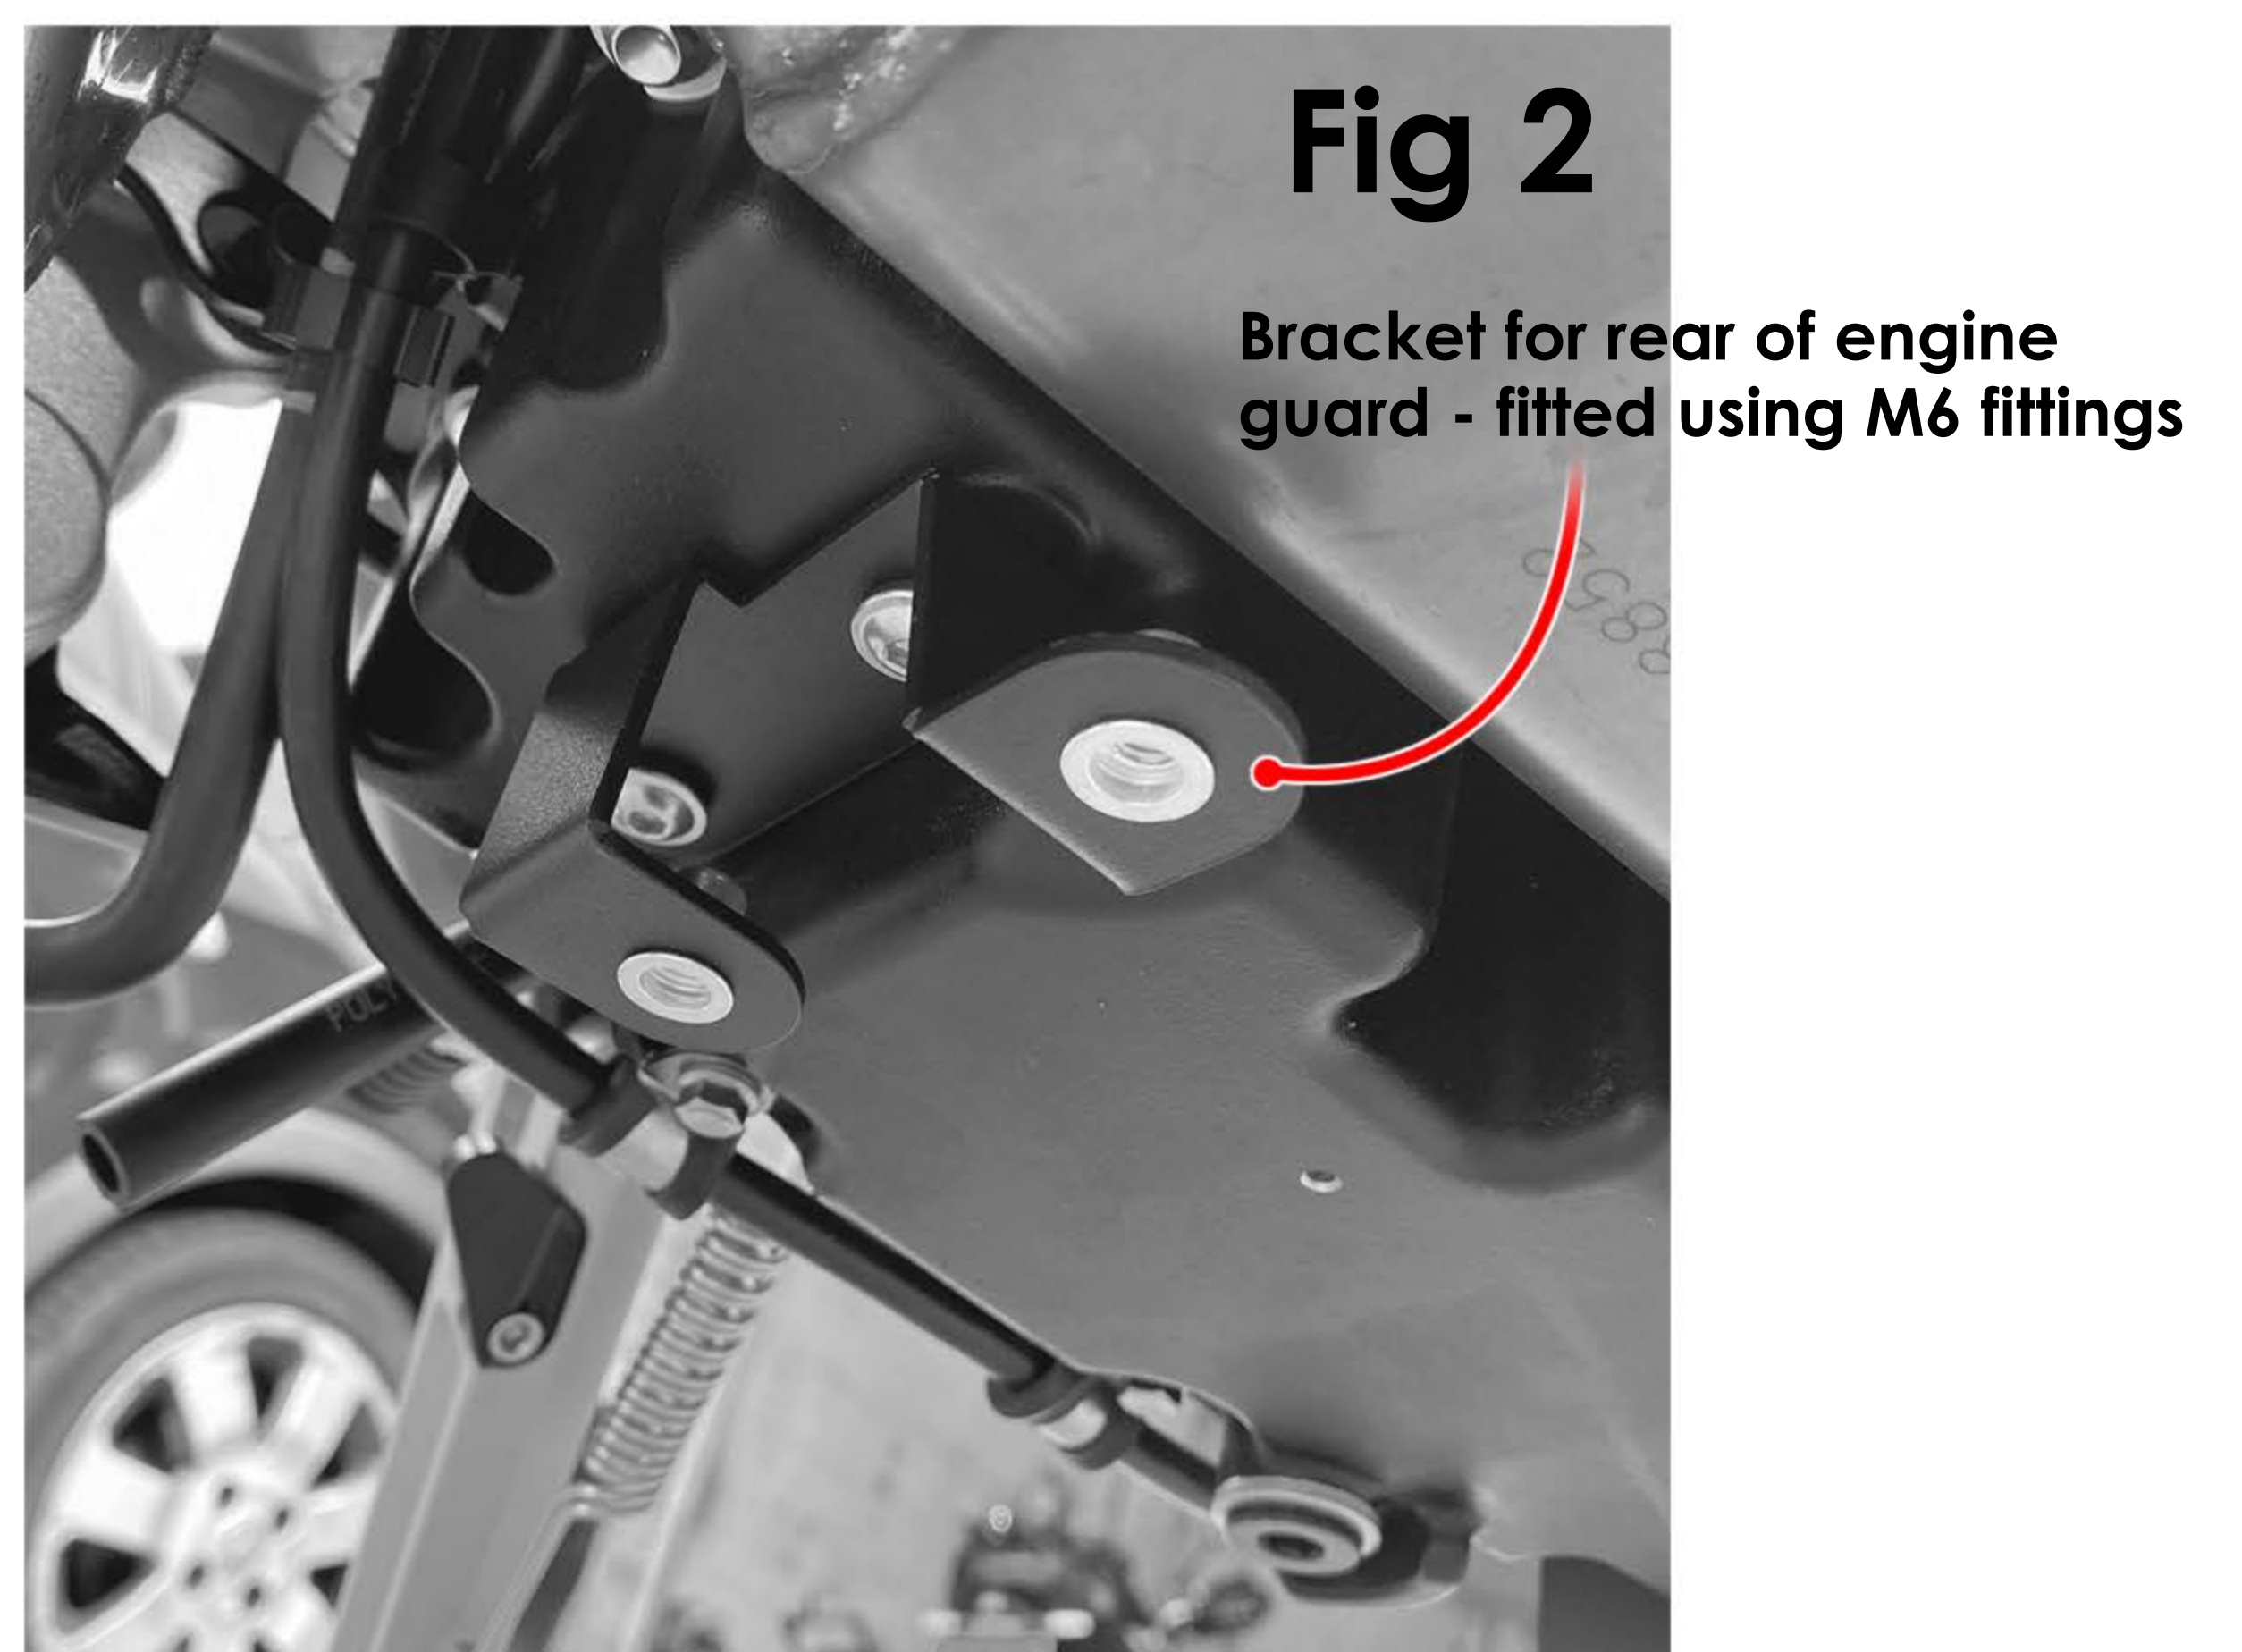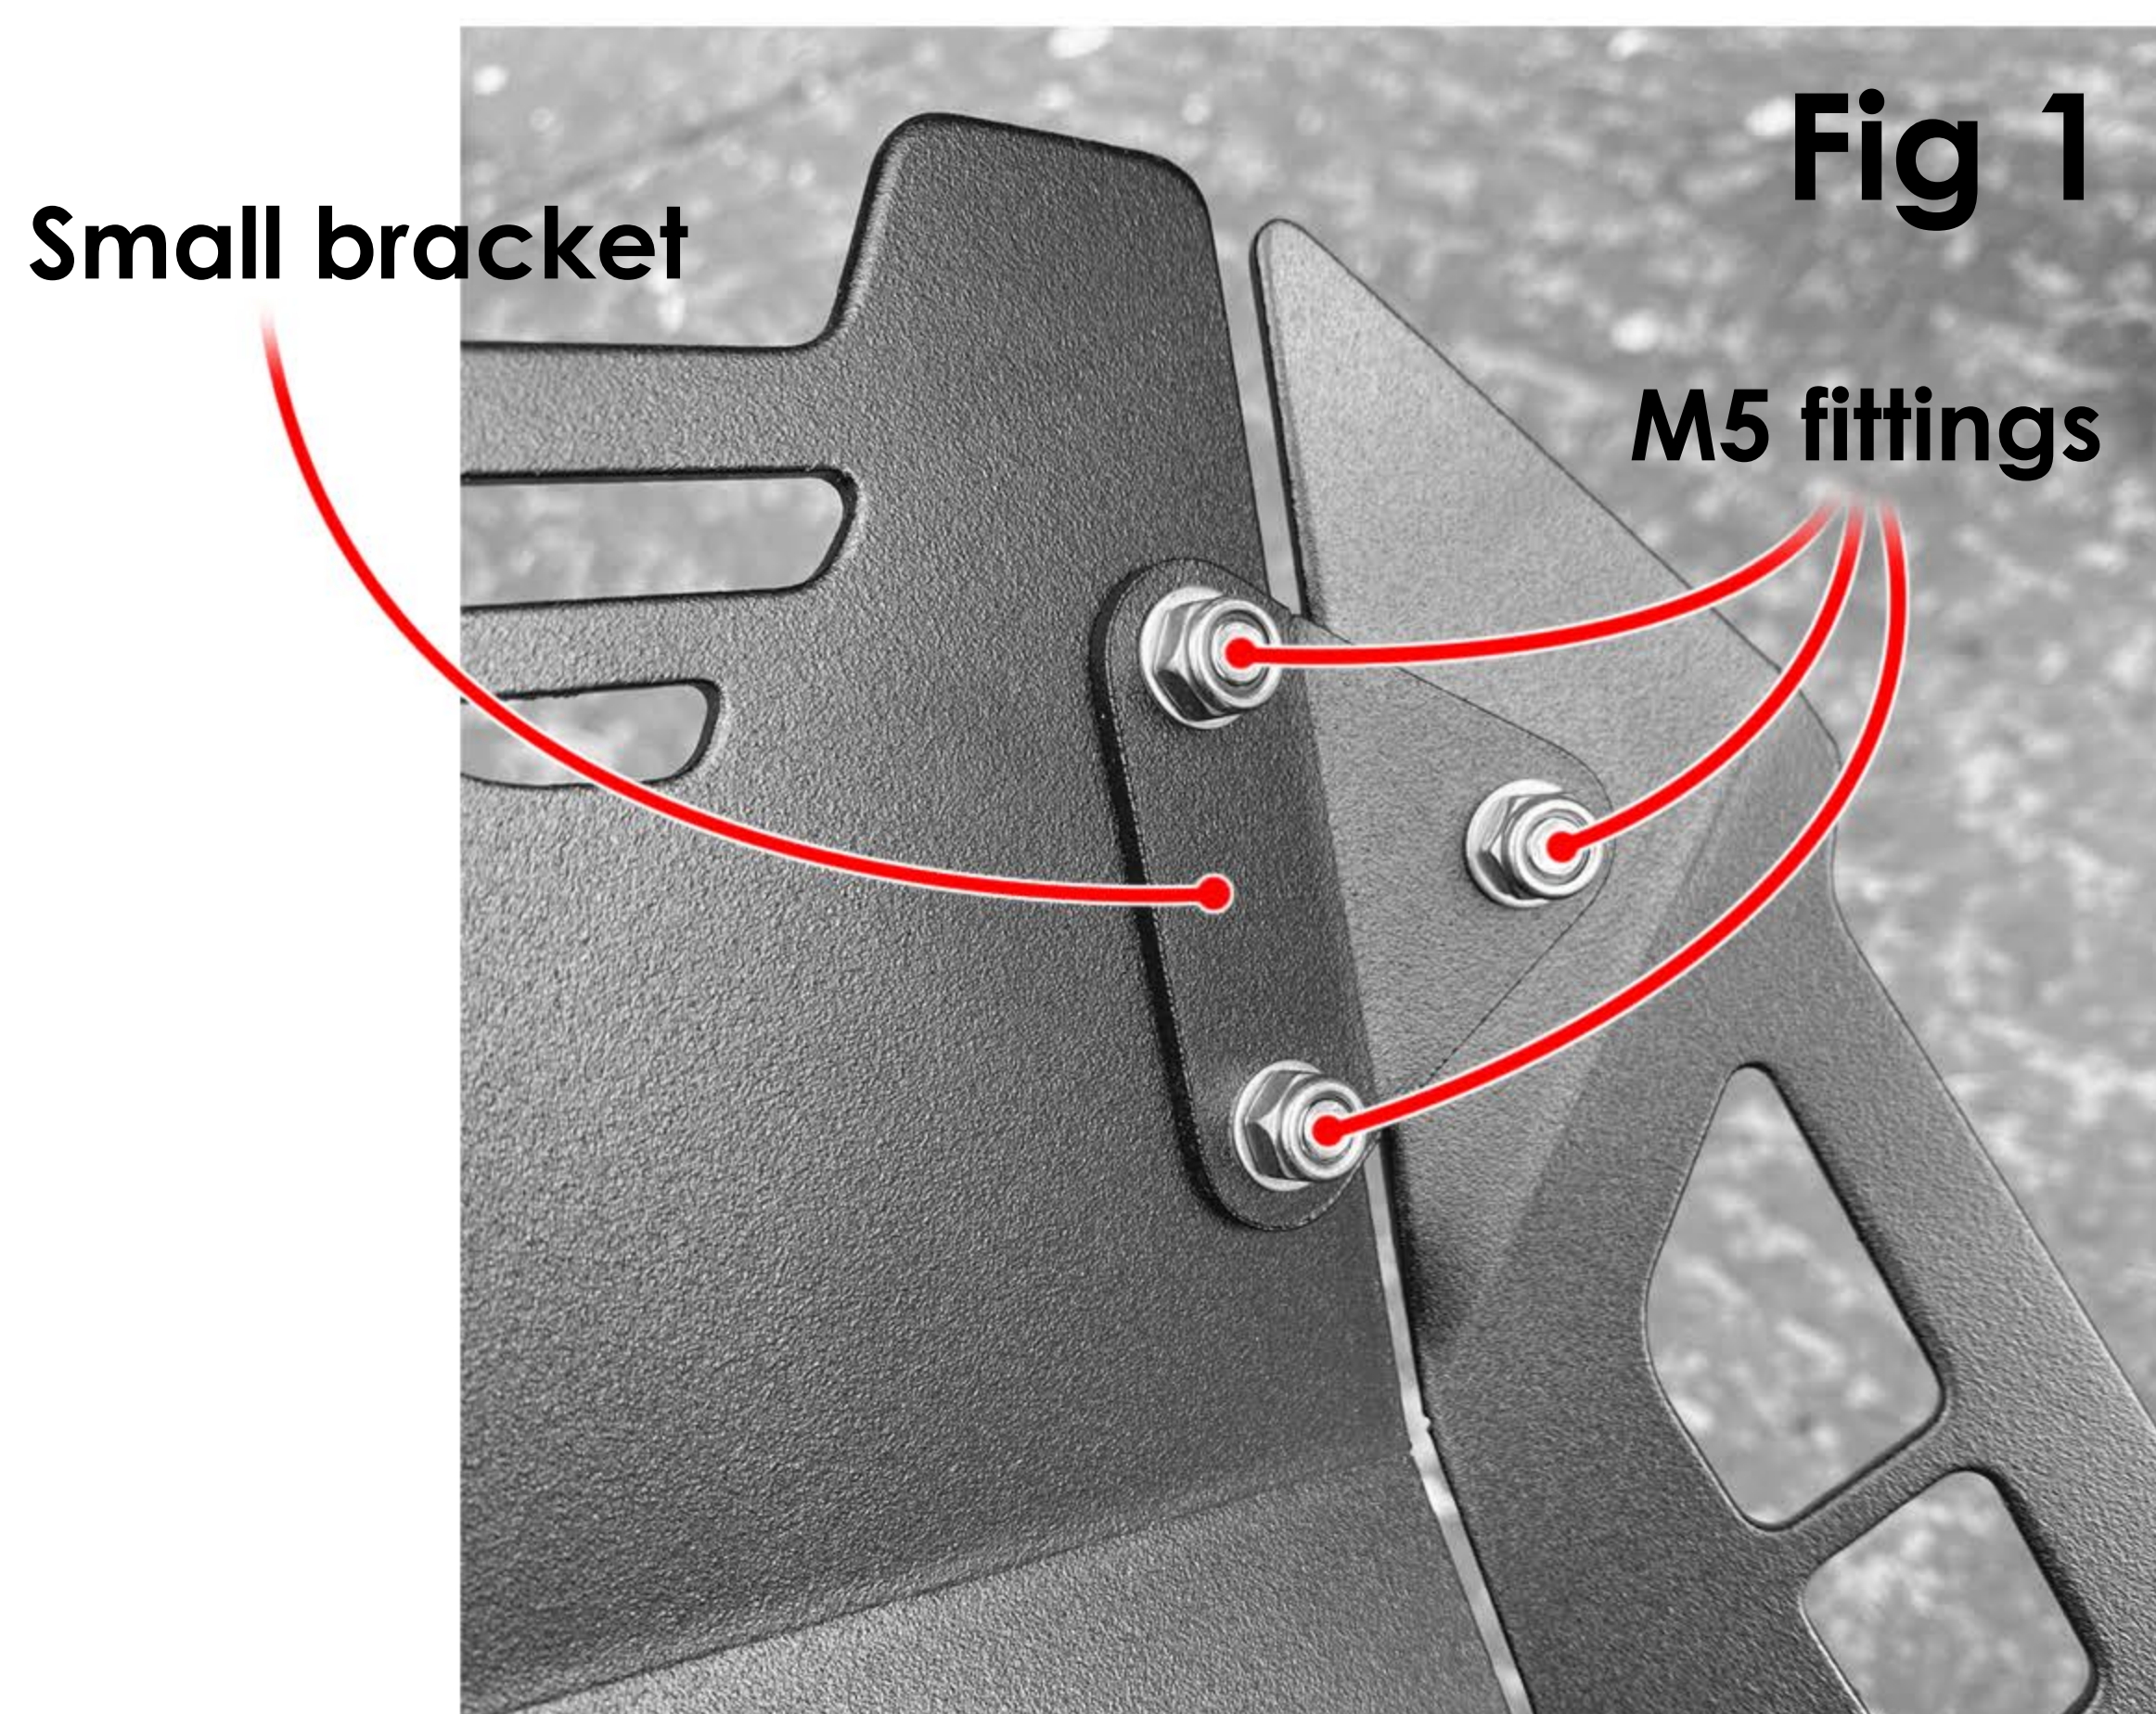

Any questions?
sales@pyramid-plastics.co.uk
 +44 (0)1427 677990
www.pyramid-plastics.co.uk



Follow us on social media and feel free to leave us a review!

